


# FITTING INSTRUCTIONS

## Morris Minor 2 speed heater

Partnumber: 063.582

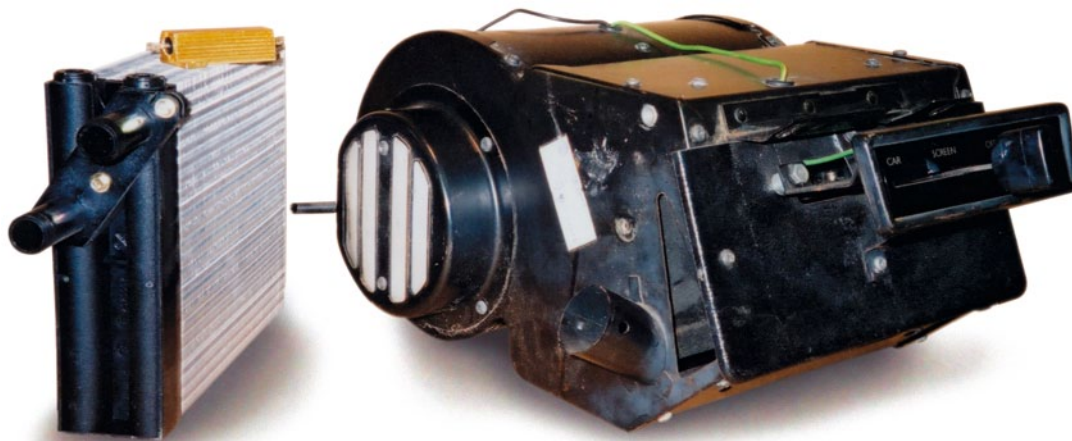

### Upated semi-recirculating heater :

This heater unit is set for negative earth use.

We suggest you thoroughly flush the cooling system before fitting.

Bring the electric live feed to the centre spade terminal of the switch and the water input to the lower pipe connection.

Do not re-use the plastic side cowls of your Minor heater as they will interfere with demisting the side windows and restrict hot air circulation.

We suggest use of an 82°C thermostat in the Summer and a 88 or 92°C during the winter for the best results.

Fit 1/2" , 5/8" adaptors in the engine bay by the bulkhead.